

Mi·Light®

RGBW Remote

Model No.: FUT095 / FUT096

Features

This manual describes two types of remote controls used for our RGBW product. Both of them have same functions but different design. Product adopt world-wide used 2.4GHz frequency, GFSK control method, with the features of low power consumption, long distance transmitting, strong anti-interference and fast communication rate. Adopt high-precision touching IC Touching is more stable and sensitive, can control specified Mi-Light / MiBoxer smart light with color, color temperature, saturation and brightness changing.

Parameters

Product Name: RGBW remote (with buttons)

Model No.: FUT095

Voltage: 3V(AAA * 2PCS)

Transmission Frequency: 2.4GHz

 
Modulation Method: GFSK

Transmitting Power: 6dBm

Standby Power Consumption: 20uA

Control Distance: 30m

Size: 52.5*21*120mm

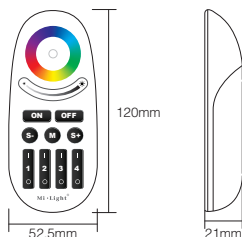

Product Name: RGBW remote (Full Touch)

Model No.: FUT096

Voltage: 3V(AAA * 2PCS)

Transmission Frequency: 2.4GHz

 
Modulation Method: GFSK

Transmitting Power: 6dBm

Standby Power Consumption: 20uA

Control Distance: 30m



Size: 52.5*21*120mm

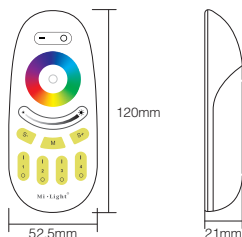

Products Key Diagram

Remark: Hold "I" to get white mode. Under white mode, press 'S-' to get warm white, press 'S+' to get cool white. Under color mode, press 'S+/S-' for saturation control. When press 'M', S+/S- can adjust the speed of the dynamic modes.


 
 
To dim all RGBW lights at once or change the color, first press "Master ON". to do this with individual lights, first press "Zone ON". secondly, choose the color or brightness according to the color ring or brightness ring.

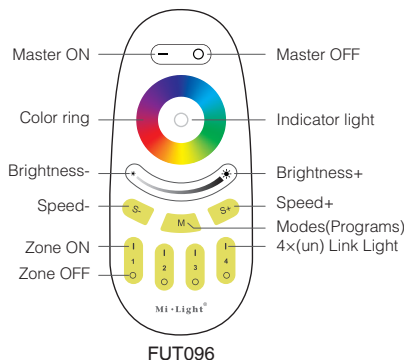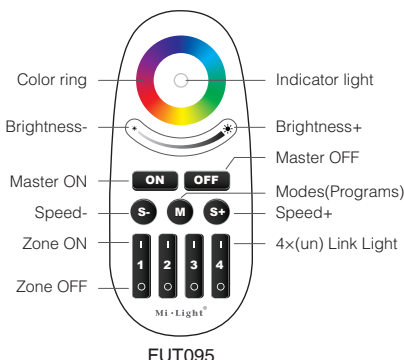


Linking&Unlinking

Remark: The light can be working after linking with the remote.

 
 
 
Linking Instructions

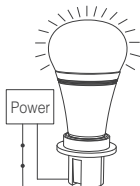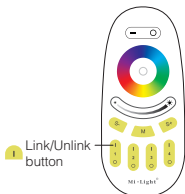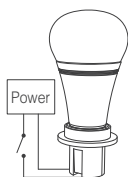


- 1 Switch off the light, after 10 seconds switch on again
- 2 When the light on, short press any zone of * 1 * 3 times within 3 seconds
- 3 The light blink 3 times slowly means the linking is done successfully.

 If the light not blink slowly, the linking failed, Pls switch off the light again, and follow the above steps again.

   Unlinking Instructions

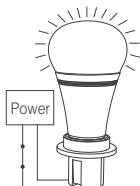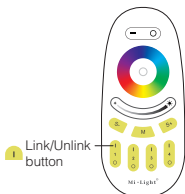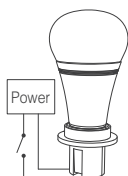


- 1 Switch off the light, after 10 seconds switch on again
- 2 When the light on, short press * 1 * 5 times within 3 seconds
Unlinking must be the same zone with the Linking
- 3 The light blinking 10 times quickly, means the unlinking successfully.

 If the light not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.

Grouping of several lights

 You can add an endless numbers of lights to a zone on the 4 channel remote by linking the lights to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

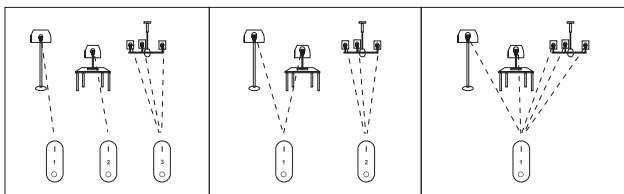

Remark:

1. The user can re-programme freely as needed. One remote can control countless lamps or controllers, but one lamp or controller can only be controlled by four remotes (Max).
2. Please check the battery installation and controller (totally discharge the power), when you programme after switching off and switching on.

Attention

1. This remote only control specified Mi-Light / Miboxer products; not all Mi-Light / Miboxer series can work on this remote.
2. In the using of the remote, if the indicated lamp blinking quickly, pls change the battery in time. Pls don't use poor quality battery to avoid the leaking of battery liquid to damage the remote.
3. This 2.4GHz remote is precise electronic product; don't use it in humid, high temperature, dust and high voltage environment; Saving it at indoor, dry and no static electricity environment.
4. Pls don't use the remote on the wide-range metal or strong electromagnetic wave area, otherwise, it will badly affect the controlling distance.



Made in China